

Burglar-alarm unit

User manual



5739 34
5739 35

Part. U3499A - 11/08-01 PC

 **legrand®**

1. Introduction

- The Burglar-alarm Unit
- The keypad
 - ✓ Navigation keys
- The display
 - ✓ Initial page
 - ✓ In case of an alarm
 - ✓ Edit menu
- What is the display showing?

2. Operation

- Enabling - disabling the burglar alarm
 - ✓ With user code
 - ✓ With transponder key
 - ✓ Rapid enabling
- Activation scenarios
- Activating - deactivating the zones
 - ✓ With user code
 - ✓ With transponder key
 - ✓ From the zone menu
- Stopping the siren sound
 - ✓ With user code
 - ✓ With transponder key
- What type of alarm occurred?
- Enabling the automations
- Enabling keys and numeric codes
- Enabling the remote control

5

- 6
- 7
- 7
- 7
- 7
- 7
- 7
- 8

11

- 12
- 12
- 12
- 13
- 13
- 14
- 14
- 15
- 15
- 16
- 16
- 16
- 17
- 18
- 19
- 20

3. Editing

- The Unit menu
- Accessing the edit menu
- Setting the date and hour
- Sound signalling
- Memorizing the Jolly number
- Making your own list of telephone numbers
- Setting up the calls
- Editing vocal messages
- Changing the user code
- Changing the numeric codes

4. Remote use

- Answering a call from the Unit
- Querying the Unit
- Controlling your home from a distance

21

- 22
- 22
- 23
- 24
- 25
- 26
- 27
- 29
- 31
- 32
- 33
- 34
- 34
- 35

Introduction

- The Burglar-alarm Unit
- The keypad
 - ✓ Navigation keys
- The display
 - ✓ Initial page
 - ✓ In case of an alarm
 - ✓ Edit menu
- What is the display showing?



1 - Introduction

The Burglar Alarm guards the safety of your house; the system is split into zones that can be activated separately; for example, at night, you can have protection only in the day zone or only around your house, so you can move around freely even when the system is on. You can save up to 16 activation scenarios and use them as needed.

In case of an alarm, the Telephone dialling device (communicator) warns you with a message, allowing you to have direct control on what is happening in your house even when you're not there.


You can check the status of the Unit and system from a fixed or mobile phone, listen to what is happening at home from a distance or send a vocal message, which will be emitted through the Unit loudspeaker or, if connected, through the sound system.

The combination of roller shutter movement devices and lights turning on lets you program the roller shutters to go up in case of an alarm in order to confuse the burglar.

You can control the functions in your house (lights, roller shutters, etc.) remotely with just a telephone call.

The Unit can also communicate with surveillance firms by means of a special protocol, further increasing the protection of your property (to set this service consult your installer).

■ The Burglar-alarm Unit

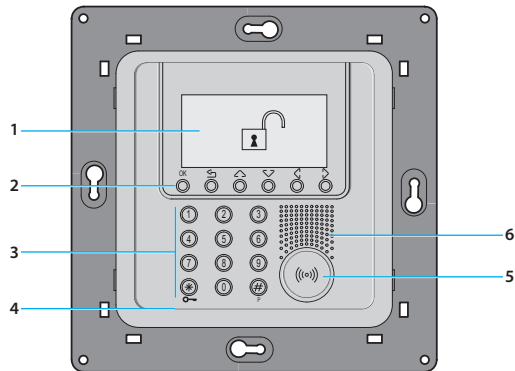

- 1 - Graphic display
- 2 - Navigation keys
- 3 - Alphanumeric keypad

- 4 - Microphone
- 5 - Transponder keys reader
- 6 - Loudspeaker

■ The keypad

✓ Navigation keys

OK



OK - Key for entering the selection or data

CLEAR - Key for cancelling the selection and for returning to the previous page – if it is held down, you can escape from the programming menu



Scroll keys

allow you to scroll the list of items in the menu



Selection keys

allow you to select the functions, which in some menus, may appear in the last line

 
■ The display

✓ Initial page

System zones
(max. 8 zones)

ON/OFF indication


Date and
hour



✓ In case of an alarm

Alarm signal zone

Technical indications

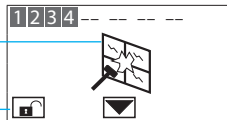


✓ Edit menu

Active zones

Disabled zone

 
Functions




1 - Introduction

■ What is the display showing?

System off,
e.g.: zones 1, 2, 3, 4 active

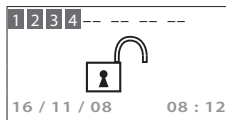


System on, intrusion alarm signal and
PSTN telephone call in progress

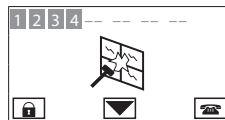

System on,
e.g.: zone activation as in scenario 2



System off, Unit battery damaged
or dead

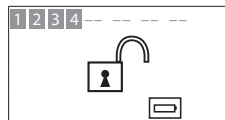

System off, general alarm signal,
tamptest with system switched OFF
or a dead radio device battery




System off, no power




System off, Burglar-alarm (antitheft)
battery dead or damaged and technical alarm signal



System off, one or more sensors
disabled (Important Unit functions
are disabled; disable only if extremely
necessary)

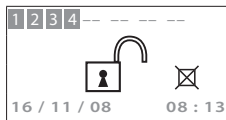

 System off, telephone calls disabled
(Important Unit functions are
disabled; disable only if extremely
necessary)



Operation

- Enabling - disabling the burglar alarm
 - ✓ With user code
 - ✓ With transponder key
 - ✓ Rapid enabling
- Activation scenarios
- Activating - deactivating the zones
 - ✓ With user code
 - ✓ With transponder key
 - ✓ From the zone menu
- Stopping the siren sound
 - ✓ With user code
 - ✓ With transponder key
- What type of alarm occurred?
- Enabling the automations
- Enabling keys and numeric codes
- Enabling the remote control

 


2 - Operation


■ Enabling - disabling the burglar alarm

✓ With user code

When the burglar alarm (antitheft) is disabled, an open lock appears in the middle of the display



Press the * key

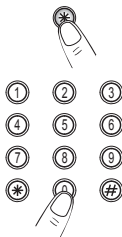



Type in the user code (basic 00000) or an enabled numeric code; typing an incorrect code, after the third attempt the keypad blocks for about 1 minute



The display will show a closed lock; if the sound system is enabled, you will hear an "enabled" vocal message; execute the same operation to disable the burglar alarm

✓ With transponder key

 When the burglar alarm (antitheft) is disabled, an open lock appears in the middle of the display

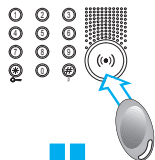


To enable the burglar alarm (anti-theft), press the # or * key on the Unit keypad and then bring the key (less than one centimeter) near the reader for 2 seconds

The display will show a closed lock; if the sound system is enabled, you will hear an "enabled" vocal message; execute the same operation to disable the burglar alarm

✓ Rapid enabling

 When the burglar alarm (antitheft) is disabled, an open lock appears in the middle of the display



Keep the * key pressed for 3 seconds for the rapid enabling



3 seconds



The display will show a closed lock; if the sound system is enabled, you will hear an "enabled" vocal message



■ Activation scenarios


 
The Unit can save up to 16 activation scenarios and you can select the one you want as follows:

Use the < > keys to select the scenario you want

After the confirmation only the zones included in the scenario will be activated.

To create or modify scenarios consult the installation manual

Confirm the selection using the user code, a transponder key or a numeric code

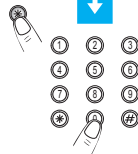

2 - Operation

■ Activating - deactivating the zones

You can deactivate (reactivate) one or more zones at any time. This will allow you to personalise the burglar-alarm operation according to your needs.

For instance, if you want to have protection even if you're not at home, you can deactivate the infrared detector zones, leaving the outer zones (entrance door and windows) active. This will allow you to move around freely inside your house without making any alarms go on and without giving up safety.

The zones in which your burglar alarm is split into appear in the first line of the display.

The active zones are shown in a dark box

the following example shows the system made up of 4 zones, all active; zone 3 is deactivated.

✓ With user code

 

 
The zones (max. 8) of the system are all active (e.g. 1-2-3-4)

Press the corresponding key on the Unit keypad to deactivate zone 3

Press the * key


Type in the user code (basic 00000) or an enabled numeric code

The Unit confirms the operations with the vocal message "executed"; the display shows zone 3 without the dark box (deactivated)

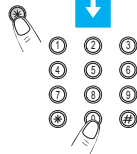

✓ With transponder key

 
The zones (max 8) of the system are all active (e.g. 1-2-3-4)




Press the corresponding key on the Unit keypad to deactivate zone 3



Confirm the operation by bringing a transponder near the reader within 5 seconds

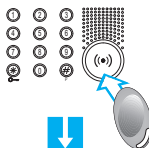

 The Unit confirms the operations with the vocal message "executed"; the display shows zone 3 without the dark box (deactivated)



✓ From the zone menu

After accessing the edit menu (next section)

 
 
Press **OK** to access the burglar-alarm (antitheft) menu

Press **OK** to access the zone menu

Select the zone you want to activate or deactivate with the **↶** **↷** keys (e.g. 3)

Press **OK** to enter

Hold down the **↶** key to escape from menu




2 - Operation

Stopping the siren sound


If the alarm goes on while you're there, you can stop the siren as follows:

With user code

 
Make sure there are no trespassers in the house



Press the * key

 


Type in the user code (basic 00000)

 


The siren stops; the Unit answers with the vocal message "disabled"

With transponder key

 
Make sure there are no trespassers in the house



Press the # or * key on the Unit keypad and then bring the key (less than one centimeter) near the reader for 2 seconds

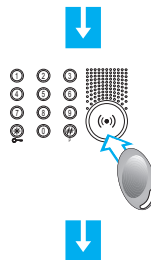

 
The siren stops; the Unit answers with the vocal message "disabled"



■ What type of alarm occurred?

When an alarm signal is displayed, you can find out what type it is (intrusion, technical, etc.) and which detector has detected it; a name has been given to each detector (kitchen window, entrance, etc.) by the installer for easier identification. Press just one key to get this information.

 The Unit has detected an alarm...




To learn more, press the key

The display provides the following information:

- detector and its name (living room window)
- type of alarm (intrusion)
- burglar-alarm (antitheft) status when the alarm goes on (ON-inserted)

The alarm signal is cancelled from the display the next time you turn on the burglar alarm (antitheft), but it remains memorised in the "Event memory", which can be consulted by selecting "Event memory" in the Burglar-alarm (antitheft) menu.

51 AI device
peripheral 1
Intrusion alarm
inserted

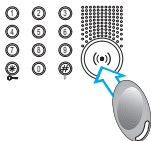

In case of a technical alarm (its symbol appears), you can find out which device has produced the alarm and reset it as well.

The Unit has detected a technical alarm



To learn more, press the key

The display provides the following information:

- device name (remote assistance)
- type of alarm (technical start)
- burglar-alarm (antitheft) status when the alarm goes on (OFF-disconnected)

By pressing the OK key, a page appears, which lets you reset a single alarm or execute a total reset

42 receiver
remote assistance
Start technical
Disconnected

press:
* reset single
OK reset total

 
 
2 - Operation

■ Enabling the automations

The burglar-alarm unit can be programmed so that an automation is linked to a particular event. For example the lights come on when the unit registers an intrusion alarm.

In this menu you can enable or disable the automations programmed by the installer.

Accessing the edit menu
Press **OK** to access the **Burglar-alarm (antitheft)** menu





NEXT

With the keys enable the automation which you intend to enable or disable; if the automation selected is enabled the wording **Disable** will appear in the last line of the display and vice versa

Press **OK** to enter

  The selected zone is enabled; the identification number is shown by a black square
Keep the key pressed to return to the initial page



Select **Automations** with the keys

Press **OK** to access

■ Enabling keys and numeric codes

 
 
You can enable or disable remote controls, transponder keys and numeric codes as you require.

Accessing the edit menu

Press **OK** to access the **Burglar-alarm (antitheft)** menu

Select **Settings** with the **↶ ↷** keys

Press **OK** to access







NEXT

Select **Code/Keys** with the **↶ ↷** keys

Press **OK** to enter

With the **↶ ↷** keys select the key whose state you intend to change. If the key selected is enabled the wording **Disable** will appear in the last line of the display and vice versa

    The key has been enabled; the identification number is shown by a black square. Keep the **↶** key pressed to return to the initial page



2 - Operation

■ Enabling the remote control

You can enable/disable your unit for remote assistance or remote management of the alarms via telephone line.

Consult your installer before modifying the settings of this menu.

 
Access the edit menu and select **Telephone Dialling device (Communicator)**



Press **OK** to access the menu




Select **Tel. functions** with the **↶ ↷** keys



Press **OK** to access



 Select **Remote control** with the **↶ ↷** keys



Press **OK** to enter



NEXT

The indications for the settings and their meaning can be found below. When the setting is finished keep the **↶** key pressed to return to the initial page



Remote assistance

If this setting is enabled the unit allows the entry of remote assistance calls from units which use the Contact ID protocol.

Remote management

allows management of the alarms via telephone line; the setting has the following options:

ON: the user and the surveillance unit can perform the remote management.

Manager: only the surveillance unit can perform the remote management

User: only the user can perform the remote management

OFF: the remote management is disabled

Editing

- The Unit menu
- Accessing the edit menu
- Setting the date and hour
- Sound signalling
- Memorizing the Jolly number
- Making your own list of telephone numbers
- Setting up the calls
- Editing vocal messages
- Changing the user code
- Changing the numeric codes



3 - Editing

The Unit menu

This manual describes the editings that are considered to be helpful when using the Unit. You can access these editings without jeopardizing the proper functioning of the Unit as well as the safety of your house.

When you access the configuration menu, you will note that this is made up of many other pages that let you configure the Unit in order to meet your needs.

 
Some of these pages cannot be accessed, as they are reserved for the installer and protected by a special code.

We suggest that you always contact your installer before changing any configuration of the Unit among those described in this manual.

Accessing the edit menu

This procedure is necessary to access the edit menu:


Make sure that the system is off



Press the OK key



 OK




Type in the user code (basic 00000)



You can now start the editing of the Unit



To escape from the edit menu, wait 30 seconds without pressing any key or press the  pushbutton.

■ Setting the date and hour

In order for the system to constantly keep all memorised events under control, it is important to set the correct date and hour.

Accessing the edit menu

SELECT
Antitheft
Communicator



Press **OK** to access the **Burglar-alarm (antitheft)** menu

Scenarios
Zones
Devices
Event memory



Select **Date and hour** with the **↵** key

Zones
Devices
Event memory
Date and hour



NEXT

Press **OK** to enter



00:00
01/01/00
Saturday
01/01/00 00:00



Type in the current hour and date on the keypad; you can move the cursor from the hour line to the date line with the **↵** **↶** keys

14:32
21/11/08
Saturday
01/01/00 00:00



When all data has been entered, press **OK** to confirm

Zones
Devices
Event memory
Date and hour

3 - Editing

■ Sound signalling

If your system has sensors which are delayed in input and/or output you can enable an audible signal for the time set for the delay.

 
Accessing the edit menu



Press **OK** to access the **Burglar-alarm (antitheft)** menu



Select **Sound signalling** with the $\swarrow \searrow$ keys




Select **Settings** with the $\swarrow \searrow$ keys



Select the setting with the $\swarrow \searrow$ key

 Press **OK** to enter






Press **OK** to confirm the setting

Keep the $\swarrow \searrow$ key pressed to return to the initial page



   NEXT



■ Memorizing the Jolly number

The Jolly number is the first telephone number dialled by the Unit when any type of alarm occurs (intrusion or technical).

 
Accessing the edit menu




Select **Dialling device (communicator)** and press **OK** to enter



Press **OK** again to access the **Jolly number** menu



 Press **OK** to enter and dial the telephone number





NEXT

it is possible to enter pauses (e.g. between area code number and telephone number) by using the * key; the pause will be displayed as a comma

Press **OK** to enter

Press **OK** to memorize the telephone number

  Press  to go back to the previous page



3 - Editing

 
Making your own list of telephone numbers

This menu lets you memorise up to 10 telephone numbers that can be used for your calls, according to the type of alarm that has occurred (see next section).


Accessing the edit menu



Select **Dialling device (communicator)** and press **OK** to enter



 Select **Index book** and press **OK** to access the menu



NEXT

 
The page on the right appears; select an option from the list (e.g. 01) and press **OK** to enter

Press **OK** to enter




Use the Unit keypad to type the name you want to enter in the index book as if you were typing an SMS message; Press **OK** to enter

If you make a mistake, you can go back to the wrong letter by pressing and re-type it; press **0** to enter a space between two words




After entering the name, a space used for the telephone number is shown
Press **OK** to enter

 Dial the telephone number



If required, it is possible to enter pauses (e.g. between area code number and telephone number) by using the ***** key, the pause will be displayed as a comma

 Press **OK** to enter




Press only once to enter another number in the index book; instead, if you have completed the editing, press it several times until the initial page appears

■ Setting up the calls

In case of an alarm, the Unit calls the jolly number and then the numbers that you have programmed among those that you have chosen in the index book according to the type of alarm (max 4 for each type of alarm), for instance, in case of intrusion, you can decide whether to have the Unit call the office or, in case of flooding, you can automatically call the plumber.

There are three types of alarms that can produce a telephone call: intrusion, breakdown and technical.

Technical alarms are produced by devices that are not directly connected to the system (for example, gas or flooding detectors); in this case, we suggest that you ask your installer who will provide you with instructions for the correct programming of the calls thereof.

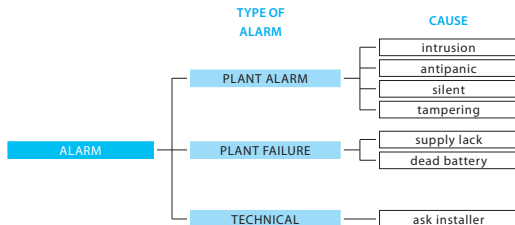


Accessing the edit menu

Select **Dialling device (communicator)** and press **OK** to enter



 Select **Set calls** and press **OK** to access the menu



Select an option from the list (e.g. Plant alarm)

Select function **Tel. Number** with the keys **←** **→** (last line on the display)




Press **OK** to enter


NEXT

3 - Editing


The list of the 4 telephone numbers linked to the plant alarm appears on the display.
Select one of the options and press **OK** to enter

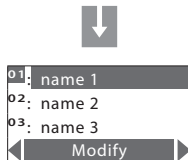


A previously memorised telephone index book appears; select a number you want to link to the type of alarm (e.g. office)

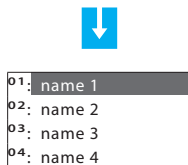

Press **OK** to enter

After entering it, you can select "number 2" and match a second telephone number with the same alarm or press  to go back to the previous page of the menu and set up calls for other types of alarms

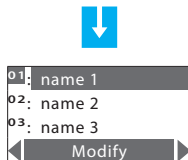

The DISABLE function is only for the set numbers. The Jolly number will be called anyway.

■ Editing vocal messages

When you receive a call from the Unit, it notifies you on what is happening with a vocal message; for example, you could receive a message such as:

"System Alarm. Warning gas alarm press a number after pressing a number you will hear:

Personalized message (address) + **the system is on, warning gas alarm** + **enter code.**

After typing in the correct password, you can send commands to the Unit. A vocal message will be returned, e.g. executed.

The message has pre-recorded parts and other personalisable parts.

Pre-recorded messages	Pre-recorded part	Part to be recorded	Pre-recorded part
Personalizable messages			
Alarm system, warnmig + type of alarm (e.g. intrusion)	Press a number to listen	Message recorded by... name and address of user	System status (e.g. ON) + type of alarm + enter code
Alarm system, warnmig + type of alarm (e.g. supplylack)			
Alarm system, warnmig + personalised message			

Personalisable parts are those referred to the address. That's where you can record a message with your personal data (name and address) and data referred to the technical alarms and telephone commands; as for the latter, ask your installer, since the message to be used should be consistent with the type of technical alarm or command related to it (e.g. "gas alarm" or "roller shutters").

When recording the messages, watch the time available, which is set at 8 seconds for the address and at 2 seconds for the other messages.

The time available to record the message is displayed by a number of asterisks that gradually go off as the seconds go by.

The recordable messages are as follows: the first for the address, the next 4 for the technical alarms and the last 4 for the first telephone commands (from 911 to 914).

For the correct link between the vocal message to be recorded and its technical alarm refer to the table below, which has been compiled by the installer.

Vocal message	Linked technical alarm
Technical 1	
Technical 2	
Technical 3	
Technical 4	

 
3 - Editing

Accessing the edit menu

 
Select **Communicator** and press **OK** to enter



Select **Vocal messages** and press **OK** to access the menu





Select an option from the list (e.g. Address) and press **OK** to enter

 


NEXT

You can now listen to the existing message by pressing **OK**, or




select the **Record** function to edit a new message with the keys  



By pressing **OK** the recording starts. Record the message (with your name and address) in a normal voice at a distance of 10 – 15 cm from the Unit microphone (Legrand logo)



 After recording, select the **Listen** function to make sure the recording was executed properly; select **Memorize only when you are sure** you want to replace the existing message with one you have just recorded; press **OK** to enter



■ Changing the user code

The Burglar-alarm Unit is protected by two codes which originally are identical (0000).

The **maintenance code** (for installation technician use only) allows access to all configuration menus of the unit; however, for safety reasons, this code **does not enable / disable the burglar alarm** but, if the burglar alarm is **enabled it will not allow access to the menus**.

The **user code** enables / disables the burglar alarm as well as the access to the configuration menus (except those for the installation technician). The user code cannot be modified if the installer code has not been modified.

 
The basic **user code** is: **00000** and it is the same for all manufactured units. It is therefore recommended to change it with another one of your choice in order to give your system the highest safety. The procedure for changing the user code is as follows:

Accessing the edit menu

Select **Burglar alarm (antitheft)** and press **OK** to enter




Select **Settings** with the **↶ ↷** keys and then press **OK**




NEXT


Select **User code** with the **↶ ↷** keys and then press **OK**

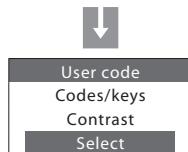

 
The page on the right appears; the cursor is already positioned on the first digit of the new code



 Type in the new code you have chosen. The new code must have 5 digits (e.g. 67890)



Enter the new code with **OK**

 

3 - Editing

■ Changing the numeric codes


It is possible to edit the numeric codes stored by the installer in the Unit

Accessing the edit menu


Select **Burglar-alarm (antitheft)** and press **OK** to enter




Select the **Update** function with the keys to modify the code

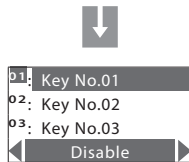


Select **Settings** with the keys and press **OK**

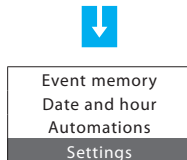

 
Type in the new code you have chosen.
The new code must have 5 digits



Select **Code/Keys** with the keys and press **OK**

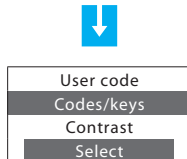

After typing the fifth digit, the check page on the side appears

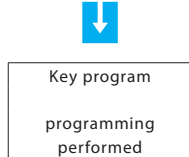

The page on the side appears: select the code to be modified with the keys



Remote use

- Answering a call from the Unit
- Querying the Unit
- Controlling your home from a distance



Remote use

■ Answering a call from the Unit

It is recommended to photocopy and hand out this page to all those who will be called by the Unit in case of an alarm.



Answer the call and wait for the alarm message, e.g.: In One by Legrand® System, warning intrusion alarm, press a number to listen



Message



After pressing a number you will hear a message, for example: Message recorded by (name and address of user), the burglar alarm is on, intrusion alarm; enter code

USER CODE



STOP CYCLE OF CALLS INFORMATION REQUEST FOR FORWARD COMMAND

Pressing a key before hanging up they will not be called during the next call cycles



HANG UP



END OF COMMUNICATION

Enabling of the user code blocks all the calls for the alarm in progress.

It is now possible to:

- send commands or query the system (see next section)
- hang up to end the communication

■ Querying the Unit

These simple commands let you know the status of the system at any time. They also allow you to communicate vocally and listen to what is happening in your house.



Dial the telephone number. The Unit will answer after the programmed number of rings; if you have an answering machine, press ## after it has started to operate



Enter code



SEND COMMAND



9 2 2

9 2 1

9 2 3



END OF COMMUNICATION

Type in the User code; if it is correct, you will get "executed" as an answer. If not, the message will be "error"; after three errors, the Unit cuts the communication

Dial the command you want to send to the Unit

Query the burglar alarm to know if it is on or off as well as any other alarms

What you will say on the telephone will be emitted from the Unit loudspeaker

You can listen to what is happening through the Unit microphone

■ Controlling your home from a distance

The In One by Legrand® system lets you control the functions in your house such as lights, heating and roller shutters - even when you're not there - through easy telephone commands.



Enter
code



CHECK MEMO-CARD
(see facsimile on the right)

Code	Description
9911	Entrance light ON
9901	Entrance light OFF
9912	Room rolling shutters UP
9902	Room rolling shutters DOWN
5*8##	ENABLING
5*9##	DISABLING



SEND COMMAND



**END OF
COMMUNICATION**

Dial the telephone number. The Unit will answer after the programmed number of rings; if you have an answering machine, press ## after it has started to operate


Type in the user code; if it is correct, you will get "executed" as an answer. If not, the message will be "error"; after three errors, the Unit cuts the communication

The memo-card is a memorandum to be filled out by the installer. It contains the codes to be sent and a description that identifies them

Type in the command on the keypad (e.g. 9912); the Unit will confirm it with a vocal message (e.g. executed, roller shutters up)

Call your installer to decide which remote functions you wish to activate; the installer will properly program the Unit and fill out the memo-card with a short description of the function related to it.

		Code 99	Description
COMMANDS	1	9911	Entrance light ON
	2	9901	Entrance light OFF
	3	9912	Room rolling shutters UP
	4	9902	Room rolling shutters DOWN
	5		
	6		
	7		
	8		
	9		



BURGLAR-ALARM UNIT

Answer the call:

- answer the call;
- press a number;
- listen to the message;
- send some commands or hang up.

Call the control unit:

- dial the telephone number;
- type the user code;
- type the command;
- hang up.

Commands

CODE	FUNCTION
922	SYSTEM STATUS
921	MESSAGE COMMUNICATION
920	ROOM LISTENING
5*8##	ENABLING
5*9##	DISABLING



BURGLAR-ALARM UNIT

COMMANDS								
1	2	3	4	5	6	7	8	9

Answer the call:

- answer the call;
- press a number;
- listen to the message;
- send some commands or hang up.

Call the control unit:

- dial the telephone number;
- type the user code;
- type the command;
- hang up.

Commands

CODE	FUNCTION
922	SYSTEM STATUS
921	MESSAGE COMMUNICATION
920	ROOM LISTENING
*5*8##	ENABLING
*5*9##	DISABLING



BURGLAR-ALARM UNIT

Code 99		Description	
1			
2			
3			
4			
5			
6			
7			
8			
9			

COMMANDS

Answer the call:

- answer the call;
- press a number;
- listen to the message;
- send some commands or hang up.

Call the control unit:

- dial the telephone number;
- type the user code;
- type the command;
- hang up.

Commands

CODE	FUNCTION
922	SYSTEM STATUS
921	MESSAGE COMMUNICATION
920	ROOM LISTENING
*5*8##	ENABLING
*5*9##	DISABLING



 
World Headquarters and
International Department
87045 LIMOGES CEDEX FRANCE

☎: 33 5 55 06 87 87

Fax : 33 5 55 06 74 55

www.legrandelectric.com

Installer stamp



Legrand reserves at any time the right to modify the contents of this booklet and to communicate, in any form and modality, the changes brought to the same.